

Step #1

Attach SpaUmbrella base stand to the bottom bracket assembly using (6) 10 x 3/4" long flat head screws with (6) #10 regular flat washers and (6) 10 nylock nuts (see Fig. 1).

Step #2

Slide the SpaUmbrella base stand underneath the spa at the preferred umbrella location. Attach the SpaUmbrella base stand to the spa using (2) #12 x 1-1/2" phillips pan head wood screws and 1/4" regular washers through the top 2 holes in the base stand (see Fig. 2).

Step #3



Insert the umbrella support post (supplied with your SpaUmbrella) into the SpaUmbrella base stand and rotate the post so it curves away from the spa (see Fig. 2).

Step #4

Slide the SpaUmbrella onto the umbrella support post and connect the (2) socket button head screws and binding barrells supplied with the SpaUmbrella (see Fig. 3).

Step #5

Attach the crank handle to the umbrella crank using the #8 x 3/4" black zinc pan head machine screw supplied with the SpaUmbrella (see Fig 4).

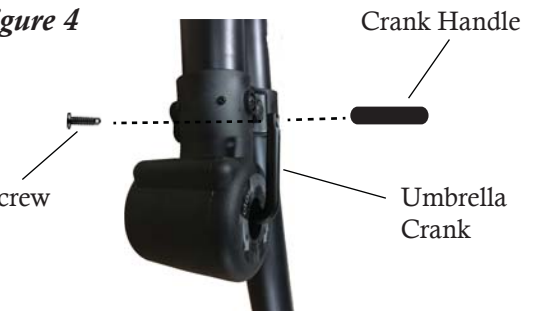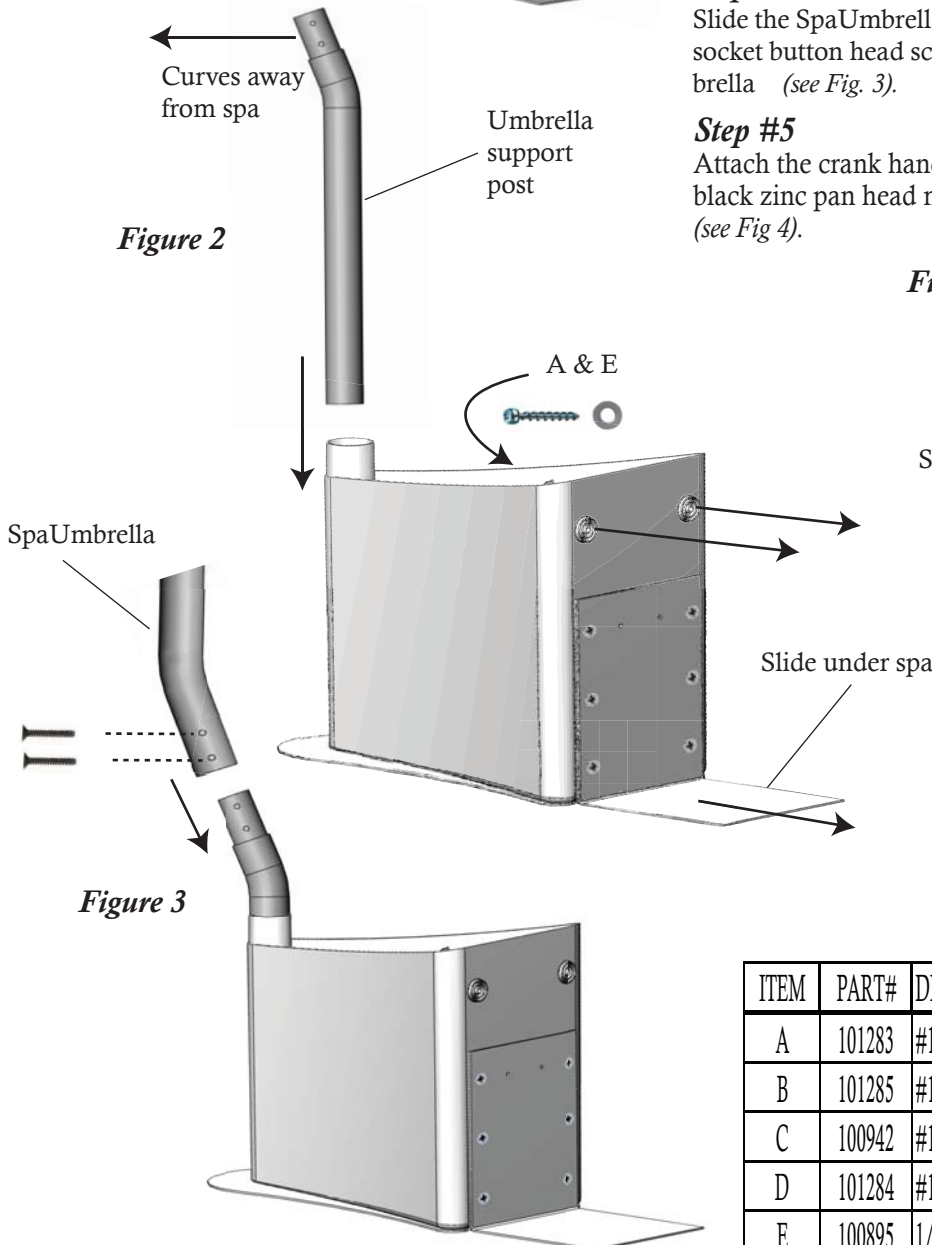

CAUTION

Do not use the SpaUmbrella in high wind condition (greater than 10 m.p.h). Injury from the SpaUmbrella being blown over and impacting the spa user can occur.

ITEM	PART#	DESCRIPTION	QTY
A	101283	#12 X 1-1/2" PHILLIPS PAN HEAD WOOD SCREW, BLACK	2
B	101285	#10 FLAT WASHER, BLACK	6
C	100942	#10 NYLOCK NUT, BLACK	6
D	101284	#10 X 3/4" FLAT HEAD SCREW, BLACK	6
E	100895	1/4" FLAT WASHER, BLACK	2